
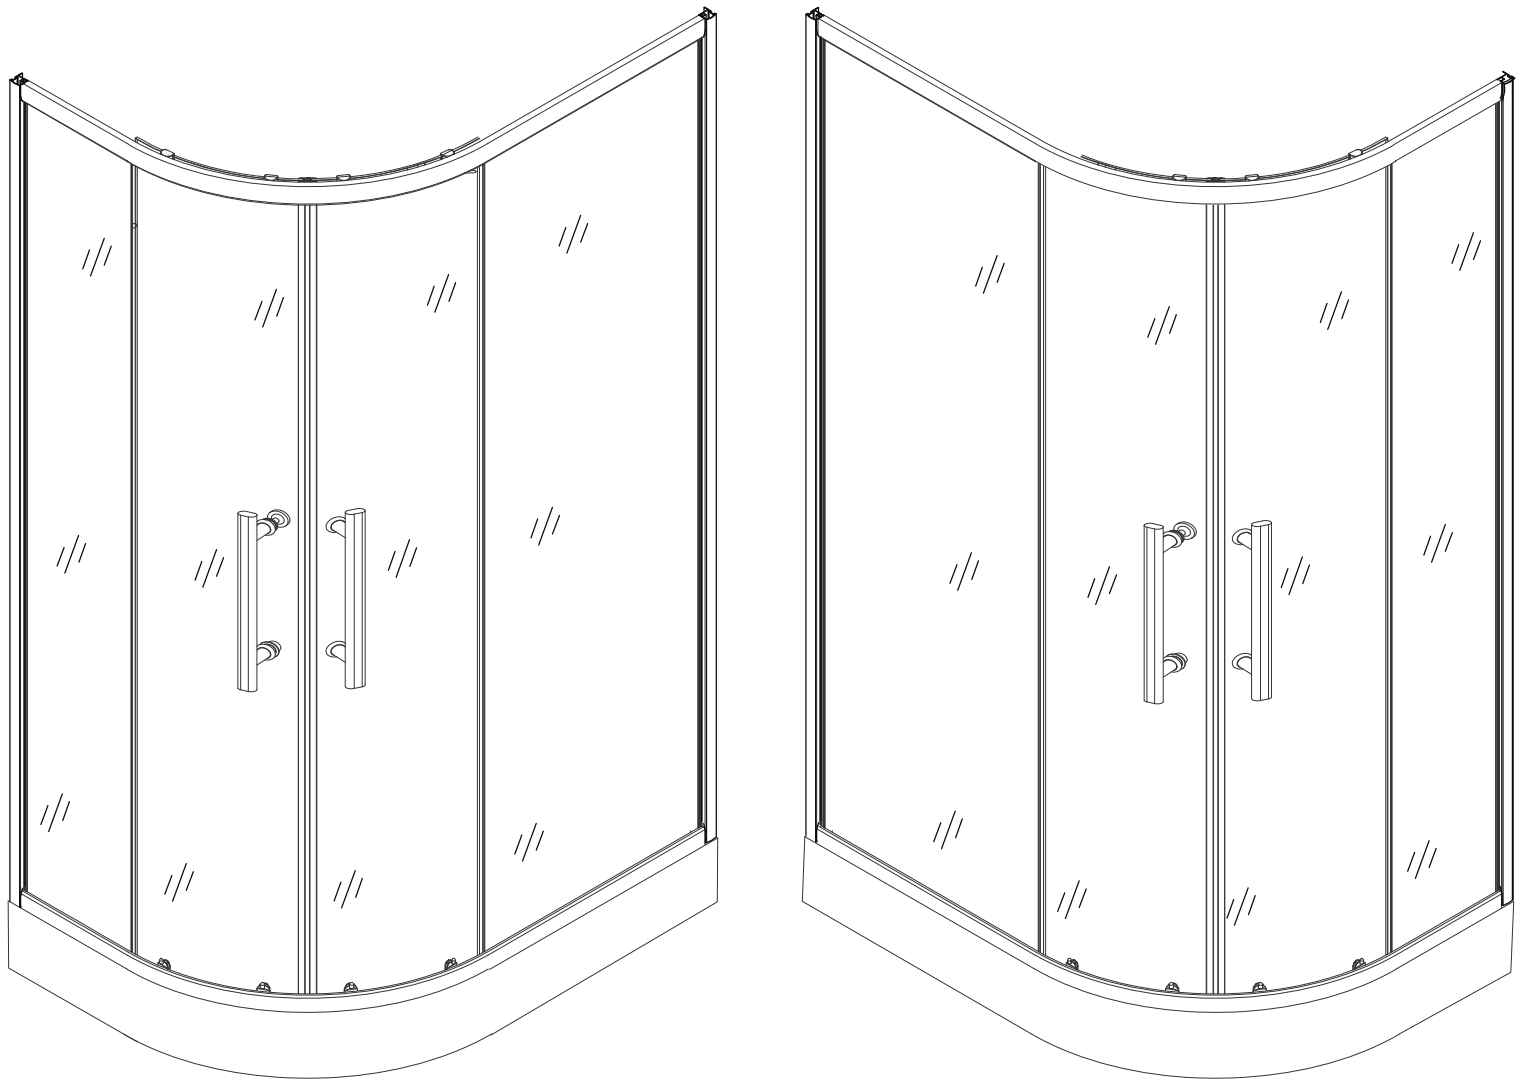



 

 



 

 


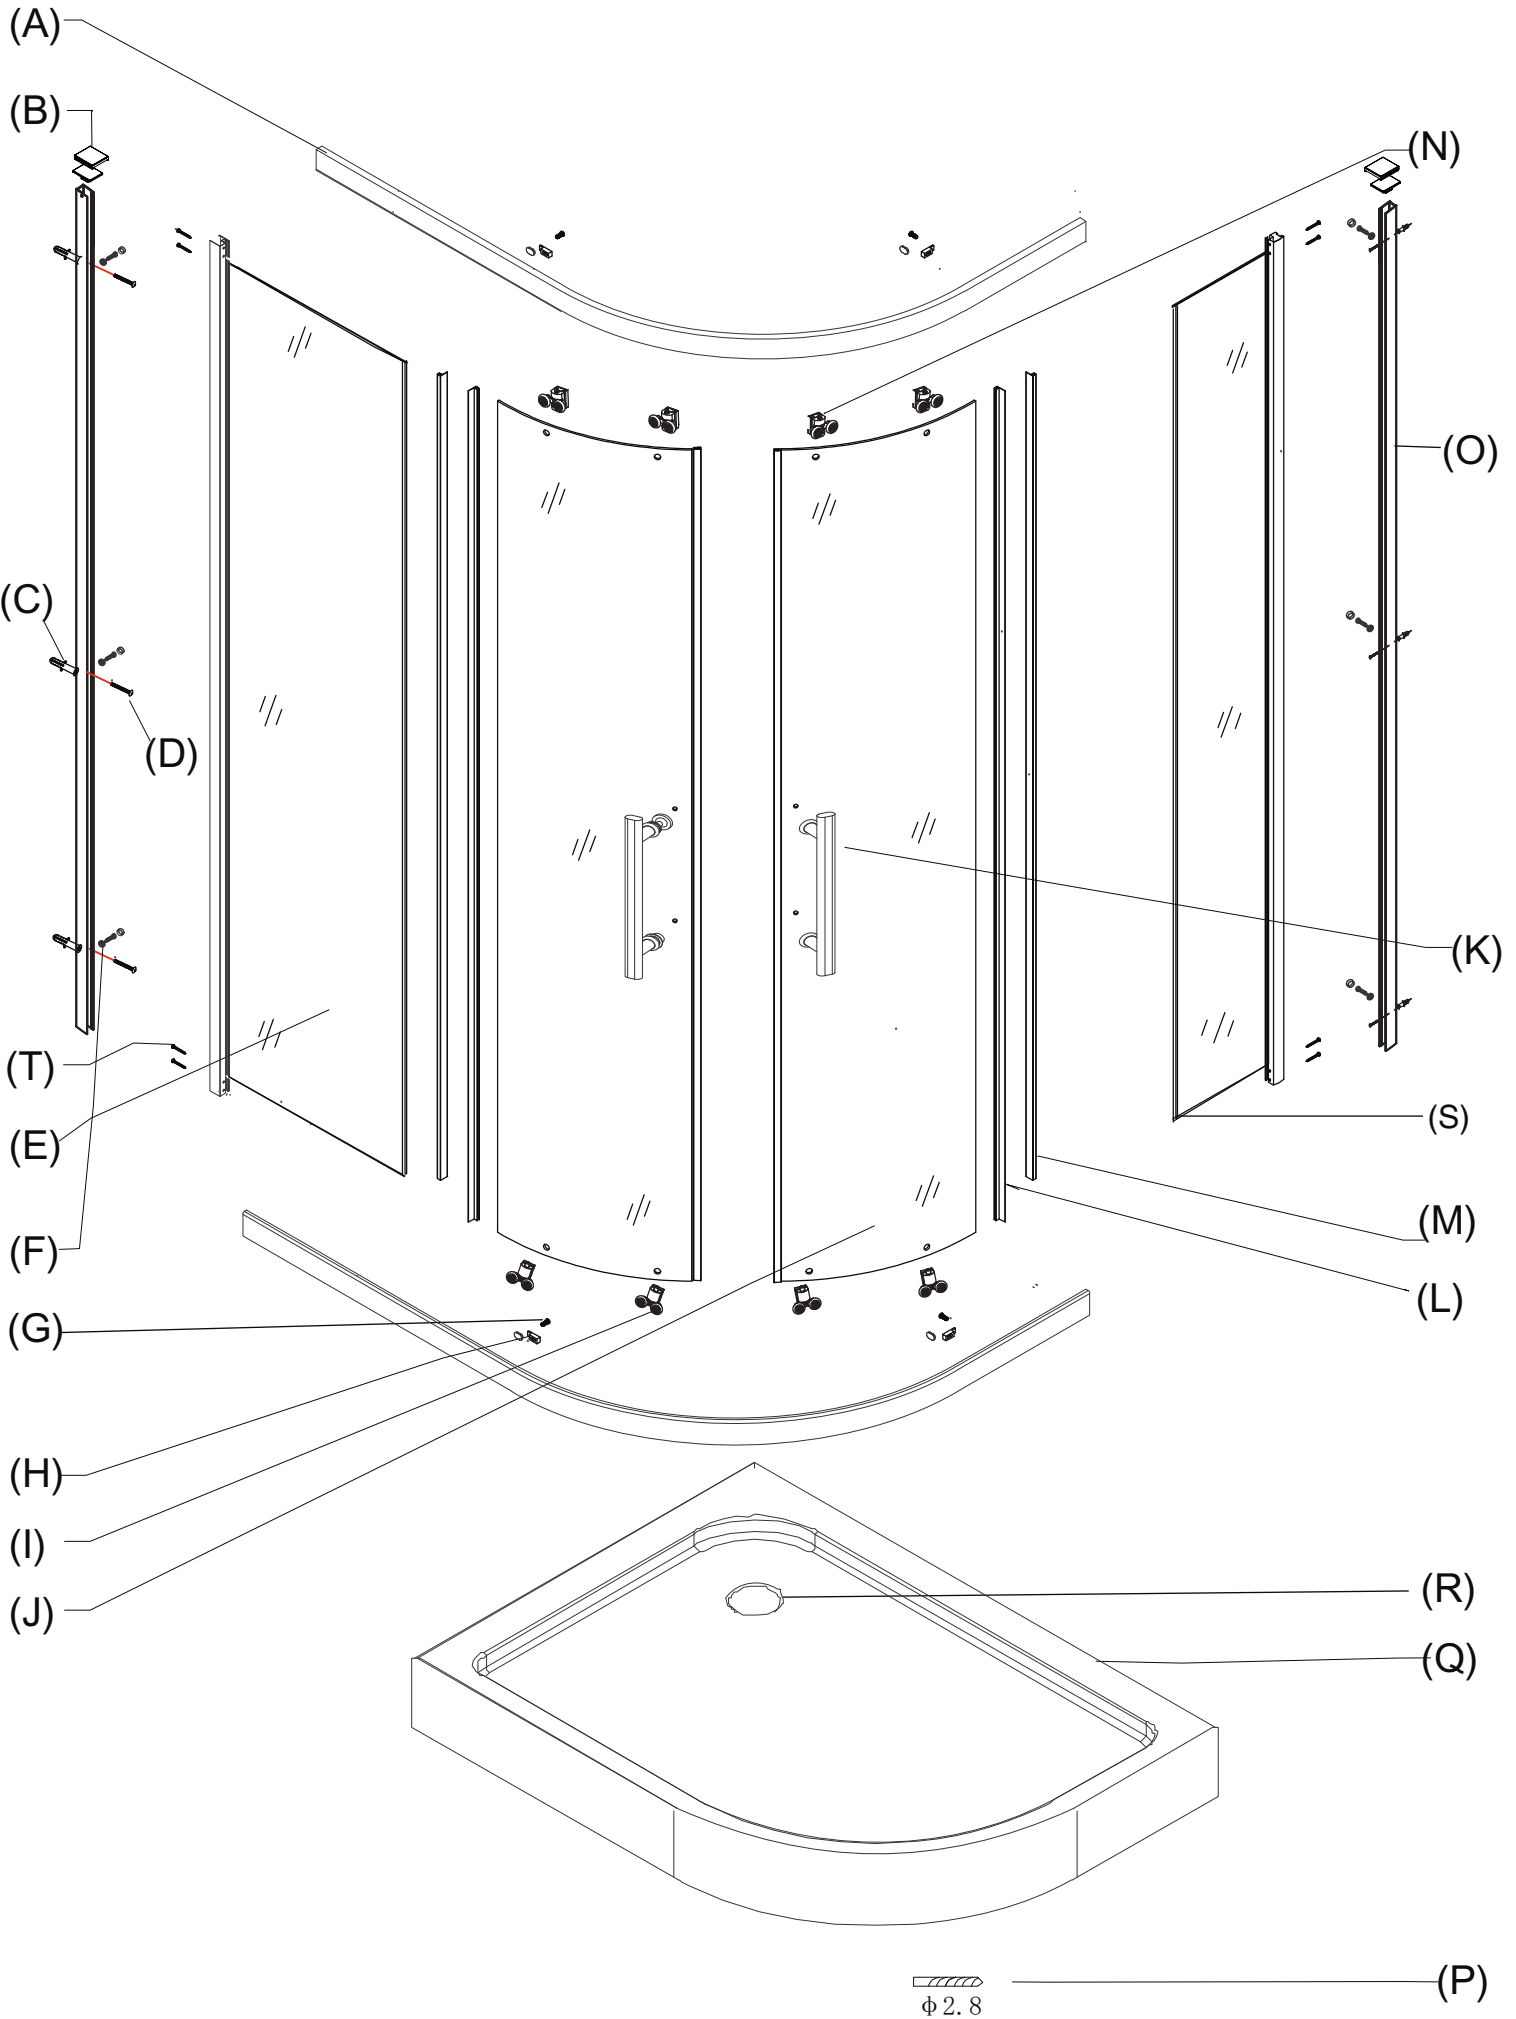


 
 


 
Installation Manual

 




**MODEL: ESR-8027A(LEFT)
ESR-8027A(RIGHT)**

SIZE: 800*1200*2000MM



A		2	J		2	S		1
B		2	K		2	T	 ST3.5*19	8
C		6	L		2			
D	 ST4*30	6	M		2			
E		1	N		4			
F		6	O		2			
G	 ST4*10	10	P	 φ 2.8	1			
H		4	Q		1			
I		4	R		1			

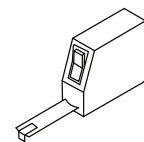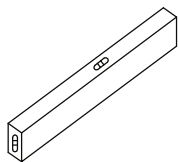

Ø6

